






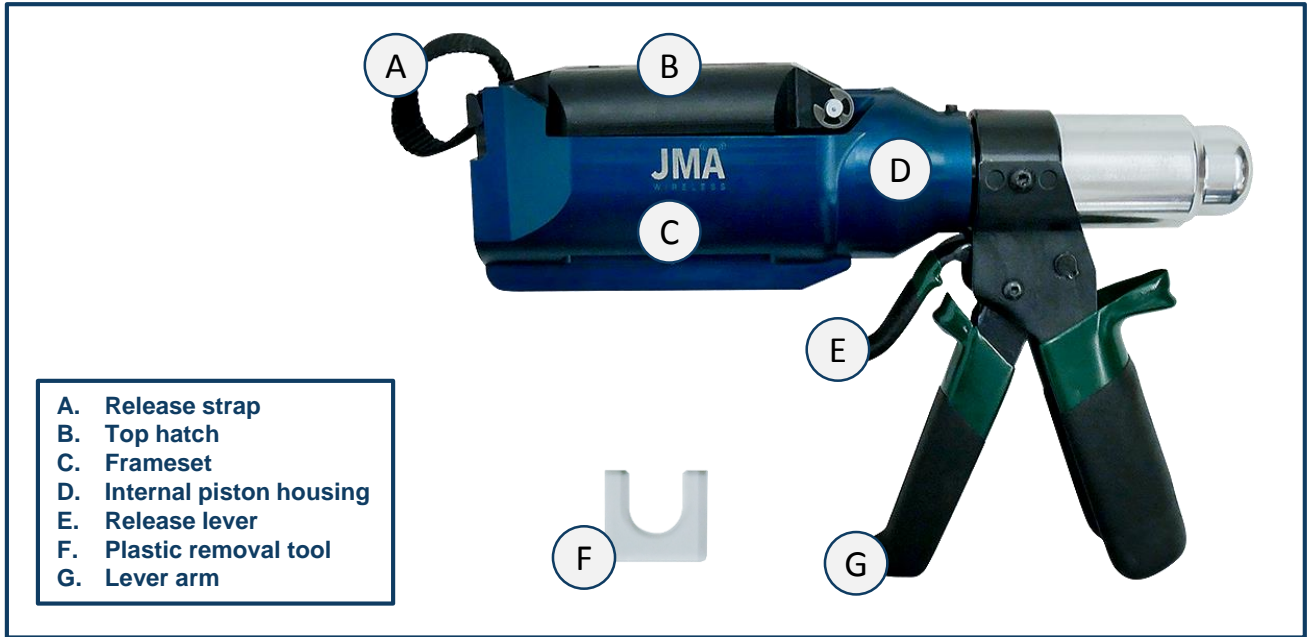


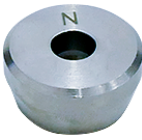


MCG-CC

Hand Compression Tool

MCG-CC hand compression tool: overview



Insert cross reference chart

Cable size	1/4"	1/2"			7/8"	
Interface	All	DIN	Mini DIN	N	4.3-10	All
Top cable insert	 (black)	 (blue)			No insert needed	
Bottom cable insert	 (black)	 (blue)			No insert needed	
Interface insert	 1/4	 DIN	 MD	 N	 4.3-10	 7/8


MCG-CC

Hand Compression Tool


Step 1: Preparation



Open the top hatch by pulling upward on the release strap.

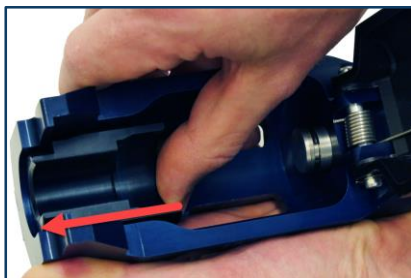

Install the bottom cable insert into the front of the frame as shown. Repeat this step with the top cable insert inside the hatch.

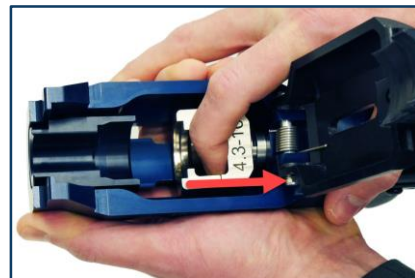

Place the interface insert into the rear of the frame. Press firmly toward the back of the unit.

Step 2: Compressing a connector



Insert the cable and connector into the frame and close the top hatch. Follow the supplied connector installation instructions.



Squeeze the lever arm. Repeat until you hear an audible "pop." This means the connector is fully compressed.



Squeeze the release lever as shown. Open the hatch and remove the compressed connector.

Step 3: Removing the inserts



Squeeze the lever arm until there is enough space to insert the plastic removal tool.



Press the plastic removal tool behind the adapter. Squeeze the release lever and remove the adapter.



Slide the bottom cable insert backward until it can be removed. Repeat this step with the top cable insert inside the hatch.